

**Pattern Information**

Date:   
 Pattern Type: Sport  
 Pattern Difficulty: High  
 Pattern Designer: BRUNSWICK  
 Pattern Volume (ml): 26,06

**Surface Information**

Surface Type:   
 Surface Brand:   
 Age:

**Pattern Parameters**

Pattern Number:   
 Pattern Name: KCS-BP V2  
 Mode: Clean & Oil  
 Forward Speed: Max Clean  
 Start Cleaner Spray: 0  
 Start Squeegee: 0  
 Start Oiling: 6  
 Split Pattern: No


**Supplies Information**

Lane Cleaner:   
 Cleaner Mixture Ratio: : 1  
 Cleaner Transition Distance: Authority22  
 Cleaner Spray End Distance: Envoy  
 Lane Conditioner:

Notes Kegel Challenge Series - Beaten Path V2  
 \_\_\_\_\_  
 \_\_\_\_\_

Zone	1	2	3	4	5	6	7	8	
Zone End Distance	14	19,5	27	30	33	36	41		
Zone Ratio	L 5,6 : 1 R 5,6 : 1	5,6 : 1 5,6 : 1	6,0 : 1 6,0 : 1	6,0 : 1 6,0 : 1	5,3 : 1 5,3 : 1	1,0 : 1 1,0 : 1	### : 1 ### : 1	### : 1 ### : 1	Pattern Ratio by Volume
Zone Volume (ml)	12,35	4,48	5,64	2,09	1,49	0,00	0,00	0,00	5,74 : 1 5,74 : 1

ZONE	7 Pin Side																	Board Number												10 Pin Side									
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	16	16	16	16	16	16	20	27	32	44	53	64	73	84	88	95	95	95	95	95	95	95	95	95	95	88	84	64	55	44	27	20	16	16	16	16	16	16	
2	15	15	15	15	15	15	18	25	29	41	48	59	66	77	81	88	88	88	88	88	88	88	88	88	88	81	77	59	52	41	25	18	15	15	15	15	15	15	
3	13	13	13	13	13	13	16	24	28	38	45	54	61	71	75	82	82	82	82	82	82	82	82	82	82	75	71	54	47	38	24	16	13	13	13	13	13	13	
4	12	12	12	12	12	12	15	23	26	36	41	50	56	66	69	76	76	76	76	76	76	76	76	76	76	69	66	50	45	36	23	15	12	12	12	12	12	12	
5	10	10	10	10	10	10	10	17	17	27	27	36	36	46	46	53	53	53	53	53	53	53	53	53	53	46	46	36	36	27	17	10	10	10	10	10	10	10	
6	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8																																							

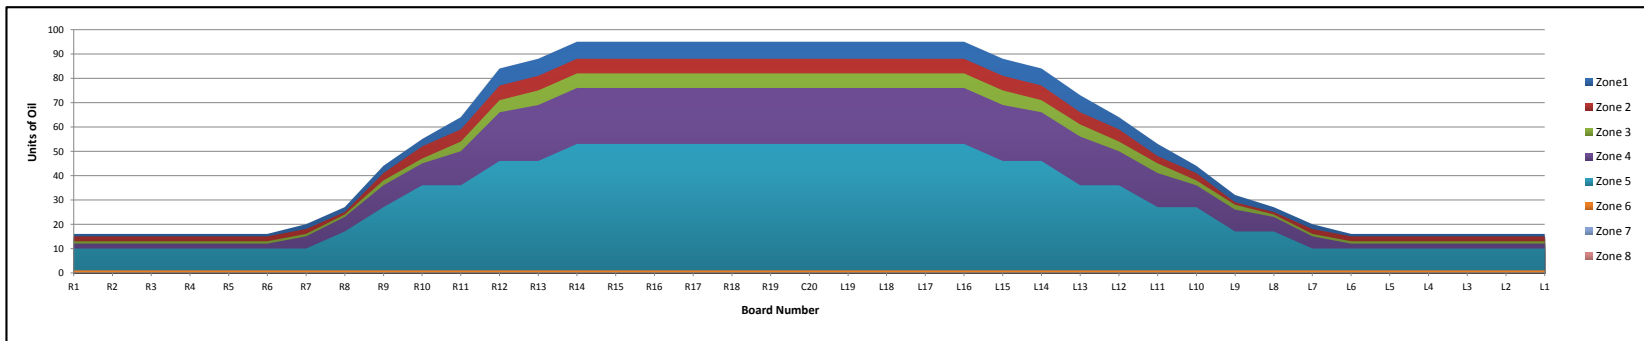



**ENVOY AUTHORITY22**

### KCS-BP V2

#### Crosswise Ratios (by units)

Zone 1			Average	Ratio	Zone 5			Average	Ratio		
3L-7L	Left =	16,8	5,6	3L-7L	Left =	10,0	5,3	3L-7L	Left =	10,0	5,3
3R-7R	Right=	16,8	5,6	3R-7R	Right=	10,0	5,3	3R-7R	Right=	10,0	5,3
18L-18R	Center =	95,0		18L-18R	Center=	53,0		18L-18R	Center=	53,0	

Zone 2			Average	Ratio	Zone 6			Average	Ratio		
3L-7L	Left =	15,6	5,6	3L-7L	Left =	1,0	1,0	3L-7L	Left =	1,0	1,0
3R-7R	Right=	15,6	5,6	3R-7R	Right=	1,0	1,0	3R-7R	Right=	1,0	1,0
18L-18R	Center=	88,0		18L-18R	Center=	1,0		18L-18R	Center=	1,0	

Zone 3			Average	Ratio	Zone 7			Average	Ratio		
3L-7L	Left =	13,6	6,0	3L-7L	Left =	0,0	#DIV/0!	3L-7L	Left =	0,0	#DIV/0!
3R-7R	Right=	13,6	6,0	3R-7R	Right=	0,0	#DIV/0!	3R-7R	Right=	0,0	#DIV/0!
18L-18R	Center=	82,0		18L-18R	Center =	0,0		18L-18R	Center =	0,0	

Zone 4			Average	Ratio	Zone 8			Average	Ratio		
3L-7L	Left =	12,6	6,0	3L-7L	Left =	#DIV/0!	#DIV/0!	3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	12,6	6,0	3R-7R	Right=	#DIV/0!	#DIV/0!	3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center =	76,0		18L-18R	Center=	#DIV/0!		18L-18R	Center=	#DIV/0!	

#### Crosswise Ratios (by ml)

Zone 1			Average	Ratio	Zone 5			Average	Ratio		
3L-7L	Left =	0,099	5,6	3L-7L	Left =	0,013	5,3	3L-7L	Left =	0,013	5,3
3R-7R	Right=	0,099	5,6	3R-7R	Right=	0,013	5,3	3R-7R	Right=	0,013	5,3
18L-18R	Center =	0,557		18L-18R	Center=	0,067		18L-18R	Center=	0,067	

Zone 2			Average	Ratio	Zone 6			Average	Ratio		
3L-7L	Left =	0,036	5,6	3L-7L	Left =	0,000	#DIV/0!	3L-7L	Left =	0,000	#DIV/0!
3R-7R	Right=	0,036	5,6	3R-7R	Right=	0,000	#DIV/0!	3R-7R	Right=	0,000	#DIV/0!
18L-18R	Center=	0,203		18L-18R	Center=	0,000		18L-18R	Center=	0,000	


  

Zone 3			Average	Ratio	Zone 7			Average	Ratio		
3L-7L	Left =	0,043	6,0	3L-7L	Left =	0,000	#DIV/0!	3L-7L	Left =	0,000	#DIV/0!
3R-7R	Right=	0,043	6,0	3R-7R	Right=	0,000	#DIV/0!	3R-7R	Right=	0,000	#DIV/0!
18L-18R	Center=	0,258		18L-18R	Center =	0,000		18L-18R	Center =	0,000	

Zone 4			Average	Ratio	Zone 8			Average	Ratio		
3L-7L	Left =	0,016	6,0	3L-7L	Left =	0,000	#DIV/0!	3L-7L	Left =	0,000	#DIV/0!
3R-7R	Right=	0,016	6,0	3R-7R	Right=	0,000	#DIV/0!	3R-7R	Right=	0,000	#DIV/0!
18L-18R	Center =	0,096		18L-18R	Center=	0,000		18L-18R	Center=	0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

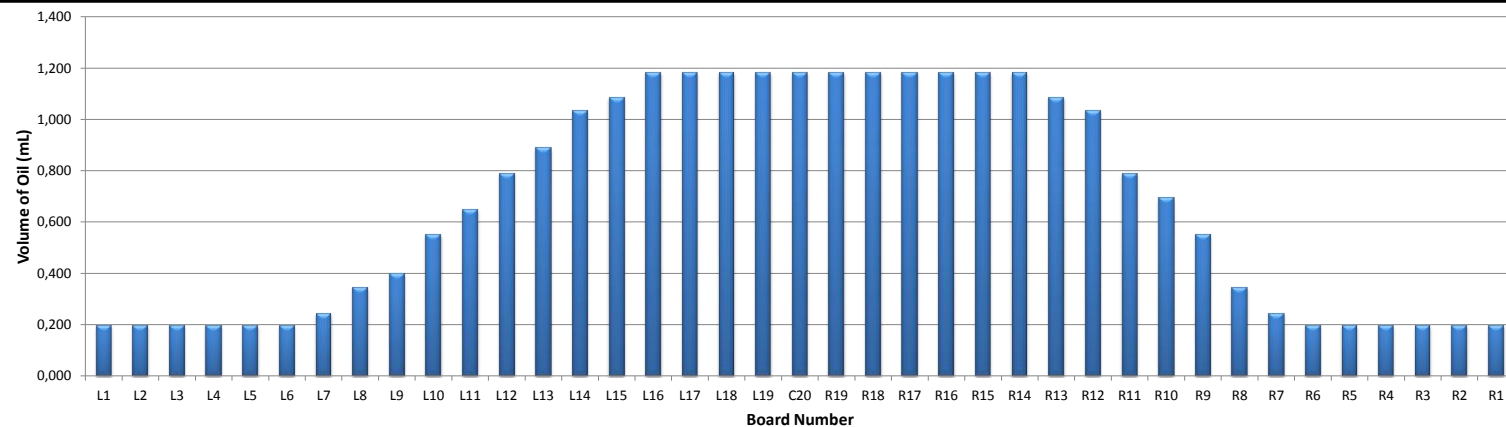

<b>3L-7L:18L-18R</b>	<b>Ratio by Total Volume</b>	<b>18L-18R:7R-3R</b>
<b>5,74</b>	<b>1</b>	<b>5,74</b>



**DIRECT+**  
Conditioning System

**ENVOY**  
AUTHORITY 22®

Lengthwise Ratio By Area

3L-7L 18L-18R 3R-7R

	Left	Center	Right
<b>Zone 2</b>	1,0	1,0	1,0
<b>Zone 3</b>	1,2	1,1	1,2
<b>Zone 4</b>	1,3	1,2	1,3
<b>Zone 5</b>	1,6	1,7	1,6
<b>Zone 6</b>	16,8	95,0	16,8
<b>Zone 7</b>	#DIV/0!	#DIV/0!	#DIV/0!
<b>Zone 8</b>	#DIV/0!	#DIV/0!	#DIV/0!

**KCS-BP V2**

Lengthwise Ratio By Board (units & ml)

Zone	7 Pin Side														Board Number										10 Pin Side																						
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1								
<b>2</b>	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1				
<b>3</b>	1,2	1,2	1,2	1,2	1,2	1,2	1,3	1,1	1,1	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,1	1,3	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2	1,2				
<b>4</b>	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,2	1,2	1,2	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,2	1,2	1,2	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3	1,3			
<b>5</b>	1,6	1,6	1,6	1,6	1,6	1,6	2,0	1,6	1,9	1,6	2,0	1,8	2,0	1,8	1,9	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,9	1,8	1,8	1,5	1,6	1,6	2,0	1,6	1,6	1,6	1,6	1,6	1,6	1,6	1,6	1,6	1,6				
<b>6</b>	16,0	16,0	16,0	16,0	16,0	16,0	20,0	27,0	32,0	44,0	53,0	64,0	73,0	84,0	88,0	95,0	95,0	95,0	95,0	95,0	95,0	95,0	95,0	95,0	95,0	95,0	95,0	88,0	84,0	64,0	55,0	44,0	27,0	20,0	16,0	16,0	16,0	16,0	16,0	16,0	16,0	16,0	16,0				
<b>7</b>	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	
<b>8</b>	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####

The lengthwise ratios are calculated from the volumes in the first zone.